

ATA 4 Channel Remote

To program Secura-code remote control into Solargate Control unit

Choose a button to use to activate the gate

On the receiver card, press and hold the 'Red SW1' button.

While you are pressing the 'Red SW1' button


- press the chosen remote button for 1 second
- release the chosen remote button for 1 second
- press the same remote button for 1 second again

Release both buttons (SW1 & remote)

Your remote is now programmed

Wait 15 seconds before programming other remotes

Note: the SW1 button must be held whilst the remote button is pressed-released-then pressed again.

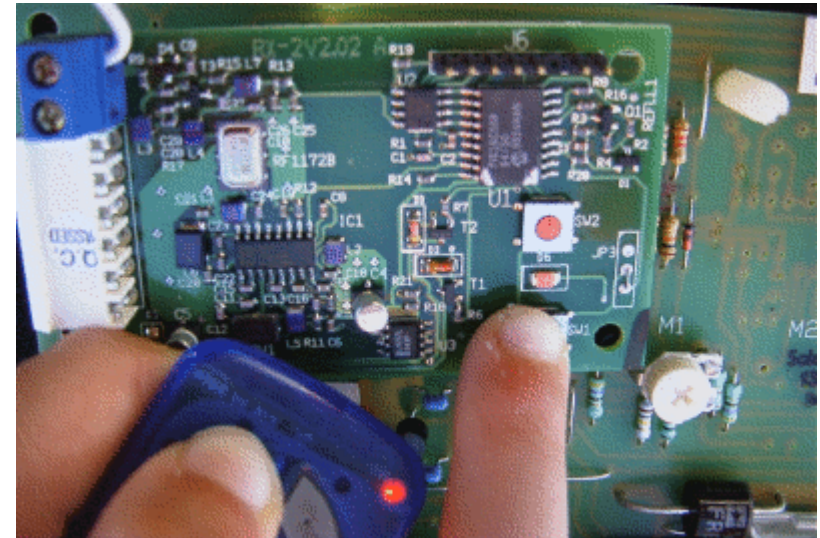

Note: If you are still unsure of programming your new remote after reading these instructions, please call us for further technical assistance.